SLIK®

DAIWA VT-523

取扱説明書

このたびは、スリック製品をお買い求めいただきまことにありがとうございます。ご使用前にこの説明書をよくお読みいただき正しく、十分に性能を生かしてお使いください。お読みになったあとは必ず保管し、わからないときには再読してください。

⚠注意 このマークは取扱いを誤った場合、人が傷害を負ったり物的損害の発生が想定される内容です。

⃠禁止 このマークは禁止(してはいけないこと)内容です。
説明にしたがい事故のないようお使いください。

English instruction in reverse side.

F567-1

仕様

縮長(格納長)	755mm
全高	1,535mm
ローポジション	380mm
ボールレベラー径	球60mm
質量	2,850g

専用ケース付

各部名称

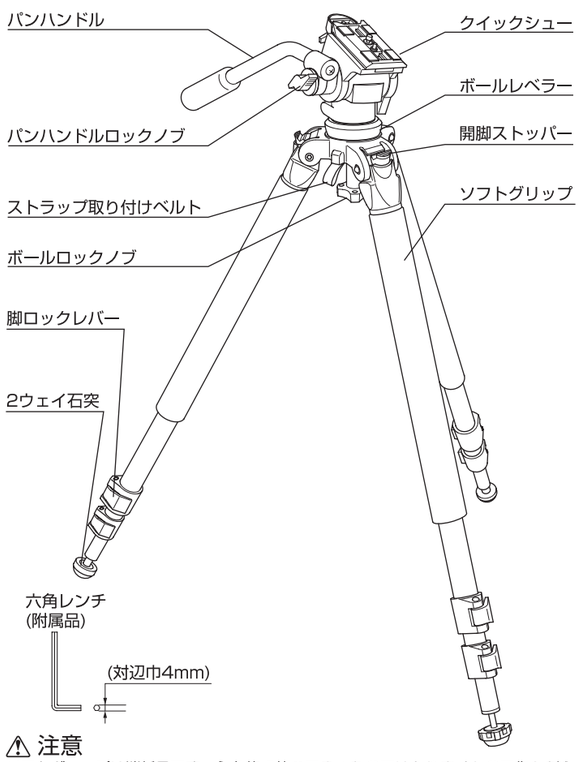

雲台

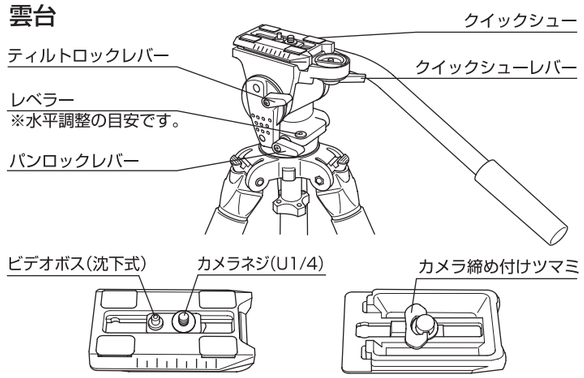

※三脚用のレベラーは水平調整のめやすです。
カメラ内蔵のレベラーとは精度が異なります。

搭載する機材

⃠禁止

この製品は、3kg位までの機材を載せるように作られています。
これ以上の機材は載せないでください。
また、3kg以下のものであっても重心位置によりバランスの取りにくいものもあります。
そのようなときは、上のクラスの三脚をお使いください。

持ち運びのとき

⃠禁止

三脚にカメラを取り付けたまま移動すると、思わぬ事故を起こします。
カメラは三脚から外して運搬してください。

⚠ 注意

ソフトグリップは消耗品です。永久的に使用できるものではありませんので傷んだらお買い求めの販売店またはケンコー・トキナー・コニカミノルタカメラ修理相談窓口へご依頼ください。(無料修理保証の対象外です。)
※まれに黒い色が付着することがありますのでご注意ください。

パンハンドルの調整

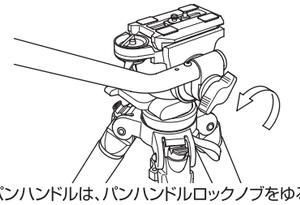

パンハンドルは、パンハンドルロックノブをゆるめて好みの角度に調節し、ロックしてください。

雲台の水平の調整

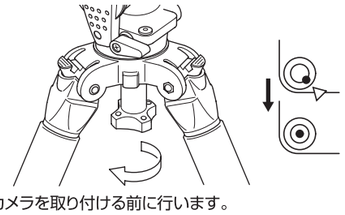

カメラを取り付ける前に行います。
①ボールロックノブをゆるめ、雲台を動かし、レベラー内の気泡が赤丸の中に入るように調整します。
②ボールロックノブを締め付けます。
注意:レベラーは目安です。
大きく水平パン撮影を行う際は、事前にリハーサルを行ってください。

カメラの取り付け方

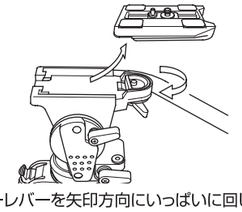

クイックシューレバーを矢印方向にいっぱいに回し、クイックシューを取り出してください。

カメラの取り付け方(つづき)

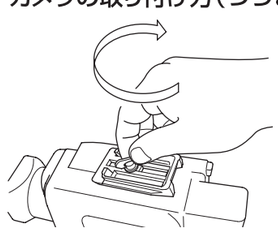

カメラ締め付けツマミを起こし、ツマミを回して、カメラとシューをしっかり固定してください。固定し終わったら、カメラ締め付けツマミをたおしてください。

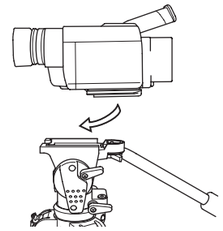

シューの前側は雲台とかみ合うようになっています。雲台の後方から前へすべりこますように装着してください。

雲台の使い方

ティルトロックレバーをゆるめると雲台はティルトします。レバーは反時計まわりに回しきってゆるめてください。

⚠注意

雲台は滑らかな操作感を出す構造になっていますので、止まっている様に錯覚しがちです。三脚のそばから離れる時は、必ずティルトロックレバーをロックしてください。ティルトロックレバーを「半締め状態」として、抵抗をつけることはできません。内部の部品が破損するおそれがありますので、必ず動かすときはティルトロックレバーをゆるめきってから動かしてください。また、過度にティルトロックレバーを締め込みますと内部の部品が破損するおそれがあります。

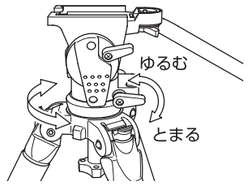

パンロックレバーをゆるめると雲台はパンします。レバーは反時計まわりに回しきってゆるめてください。

⚠注意

パンロックレバーを「半締め状態」として、抵抗をつけることはできません。内部の部品が破損するおそれがありますので、必ず動かすときはパンロックレバーをゆるめきってから動かしてください。また、過度にパンロックレバーを締め込みますと内部の部品が破損するおそれがあります。

脚の伸ばし方

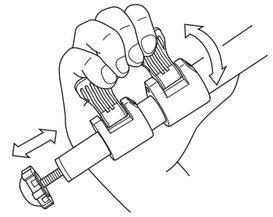

脚ロックレバーを開くとパイプは伸縮できます。希望の位置でレバーをしっかりロックしてください。

安全のため脚は下に向けただけでは伸びない構造になっています。石突を下に向けて引き伸ばしてください。

開脚角を変える

PAT.

⚠注意

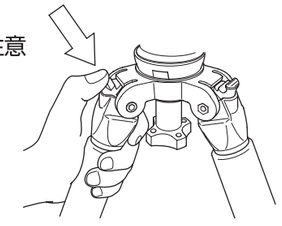

標準の開き位置から脚を少し閉じるようにして、開脚ストッパーを押すと残り二つの開脚角(ミドル、ローポジション)がえらべます。おおよその角度が決まったら開脚ストッパーから手を離し、ストッパーが突き当て部に当たるまで、確実に開脚してください。
また、操作の際は指のはさみ込みに、ご注意ください。

2ウェイ石突

⚠注意

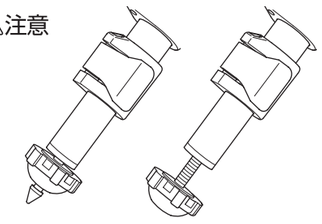

石突部は、ゴム突とスパイクを併用していますので設置条件にあわせて使いわけしてください。
ご注意
スパイクを露出したまま移動するのは危険です。右側の絵の様に必ずスパイクを格納した状態にしてください。

お手入れ

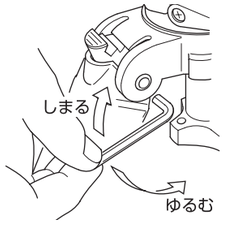

使用前にゆるみの有無をご確認ください。
ゆるみが大きい場合は付属の六角レンチで調整してください。

お手入れ

- グリス、油の補給はしないでください。
- よごれたときには、中性洗剤をやわらかな布につけてふいてください。その後、きれいな乾いた布でふいてください。
- 火に近づけないようにしてください。夏など高温になる車内などに長時間放置しないでください。

＊改良のため、お断りなくデザイン、仕様を変更することがありますのでご了承ください。

©2013 SLIK CORPORATION

アフターサービス

本製品の補修用性能部品は製造中止後5年を目安に保有しております。
したがって本期間中は修理をお受けいたします。

インターネット・ホームページ　http://www.slik.co.jp/

製品に関するお問い合わせ
ケンコー・トキナー・コニカミノルタお客様センター
Tel. 0120-162-414

修理に関するお問い合わせ
ケンコー・トキナー・コニカミノルタカメラ修理相談窓口
Tel. 0120-975-124

スリック製品販売元
株式会社 ケンコー・トキナー
〒161-8570 東京都新宿区西落合3-9-19

製造元
スリック株式会社
〒350-1231 埼玉県日高市鹿山853

CE

SLIK® DAIWA VT-523

Operating Instructions

Congratulations on the purchase of a SLIK DAIWA VT-523 Tripod.
SLIK Corporation has designed your tripod to be a sturdy, rugged, dependable product that will provide you with many years of satisfactory use.
Please take a few moments to read this instruction sheet carefully so that you can take full advantage of many fine features on your tripod. Retain this instruction sheet in case you might want to refer back to it.

⚠ Caution
This caution icon refers to information pertaining to important safety procedures in preventing injuries, or damages which may occur as a result of mishandling this product.

⃠ Prohibition
This prohibited icon refers to information pertaining to prohibited contents. Please refer to instructions closely to avoid accidents.

F567-1

Specification

Folded length	755 mm (29 9/12")
Maximum height	1,535 mm (60 5/12")
Low Position	380 mm (15")
Ball base	60 mm (2 4/12")
Weight	2,850 g (6lbs 5oz)

Components

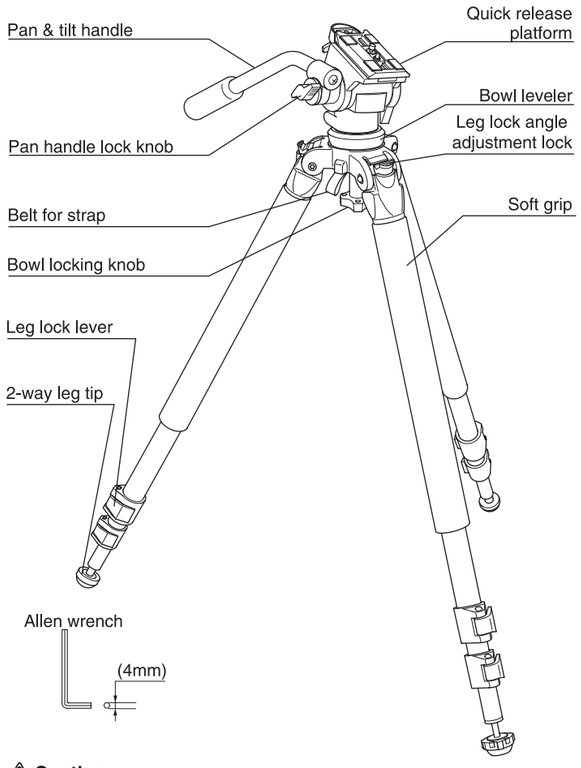

⚠ Caution
Soft grip is consumption and cannot be used permanently.
Please relace is whenever ragged.

Pan Head

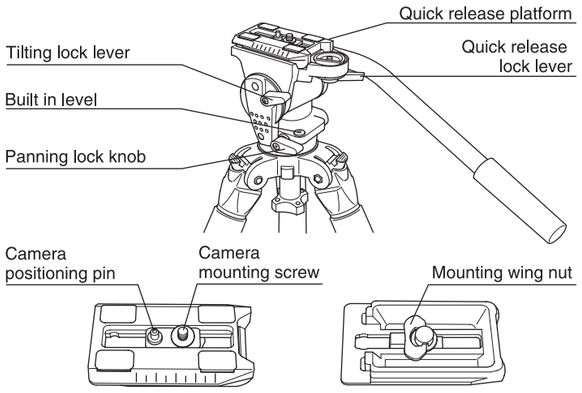

Equipment that can be used with this tripod

⃠ Prohibition

This product has been designed to handle equipment weighing under 3 kgs (6 lbs 9oz).Do not overload. Some equipment weighing under 3 kgs (6 lbs 9oz), such as long lenses, may not balance well due to its weight distribution. In such case, please use a larger tripod.

Carrying the tripod

⃠ Prohibition

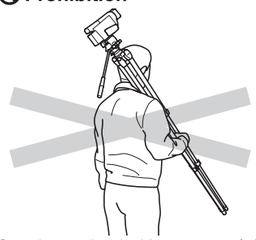

Carrying a tripod with a camera left on can result in unexpected accidents. We therefore, recommend you to remove your camera while carrying the tripod.

Adjustment of the pan & tilt handle

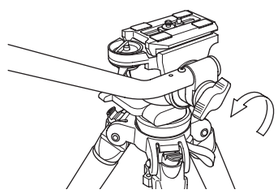

Loosen the pan handle lock knob first.
Then, adjust the angle as needed and lock it.

How to adjust the level of pan head

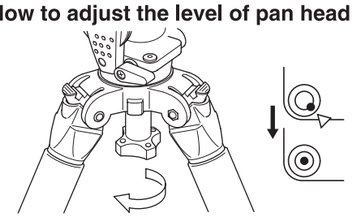

Adjust the level before putting the camera on the pan head.
1) Loosen the bowl locking knob and adjust the bubble in the level to fit into the red color mark, while shaking the pan head.
2) Tighten the bowl locking knob.
Remarks:
This is just rough aim and recommendable to test in advance before operating.

Attaching the camera to the quick release platform

⚠ Caution

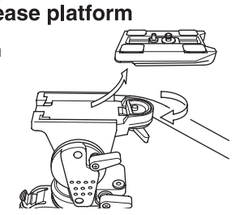

Remove the quick release platform turning the lock lever.

(con.→)

Attaching the camera to the quick release platform (Continued)

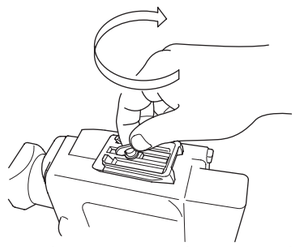

Please set the camera mounting screw and the retractable camera positioning pin to holes at the camera side. Then, fix it with mounting wing nut tightly.*You can also use this tripod for your still camera as the camera positioning pin is retractable.

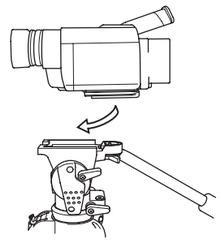

The front part of the shoe gears with the head. Please fix to make it slide into a front from the back of the head.

Using the pan head

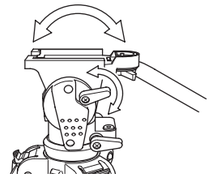

Loosen the tilting lock lever, and the head will tilt back and forth.
Note:
Since the panhead has the structure of a smooth feeling on operation, it looks sometimes standing. Please be sure to lock a tilting lock lever when you leave from your tripod.

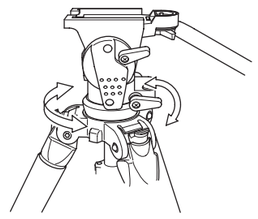

Loosen the panning lock knob, and the head will rotate along the horizontal direction.

Extending the Tripod Legs

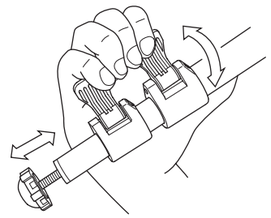

Flip up the leg lock lever to extend or shorten any of the individual leg sections to the desired length, and press the leg lock lever flush against the leg to lock. For greater stableness, use the thicker leg columns first.

The leg has structure that is inelastic only turning downward.

Leg angle adjustment

PAT.

⚠ Caution

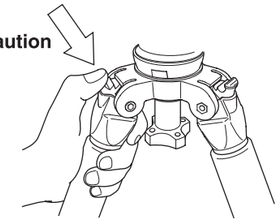

You can adjust the leg angle in 3 different positions. To change the angle of each leg, move the leg slightly towards the center column, and while pressing down the leg angle adjustment lock, pull leg open to the desired position.

2-way leg tips

⃠ Prohibition

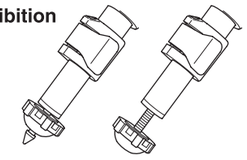

Spiked tips are useful outdoors especially on loose grounds or on rocky terrain. Rubber leg tips are recommended for indoor works.
To use the spikes, turn the rubber tips clockwise sevelal times until they stop.To get the rubber tips back into position, just turn them counterclockwise.
It is not recommendable to move with a spike exposed. Please be sure to change into the state where the spike was contained.

Care of the tripod

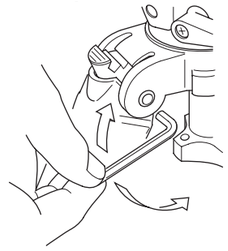

Please check the existence of slack before use. When slack is large, please adjust by the attached allen wrench.

- DO NOT apply any grease or oil to this product.
- Clean with a mild detergent and a soft cloth only.
- DO NOT use close to flame. Avoid extreme heat.

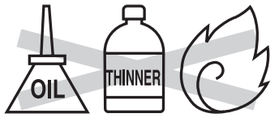

Slik Corporation reserves the right to make changes in design and/or improvements on the products without any obligation and advanced notice.

SLIK CORPORATION
853 Kayama, Hidaka City, Saitama 350-1231 Japan ©2013